Before ringing the bells up, please disable the chimes

## PULL THE HOOK DOWN

## FIX ON THE PEG BELOW

After ringing down please release the chimes carefully Please leave the chiming rope as you found it

Before ringing up, please disable the chimes

## TURN THE SWITCH TO OFF

After ringing down, please release the chimes by turning the switch back ON

Before ringing up, please disable the chimes

## PUSH LEVER DOWN & PEG DOWN

After ringing down, please release the chimes carefully

